


# Electric Pruning Shears Extension Pole Instruction Manual

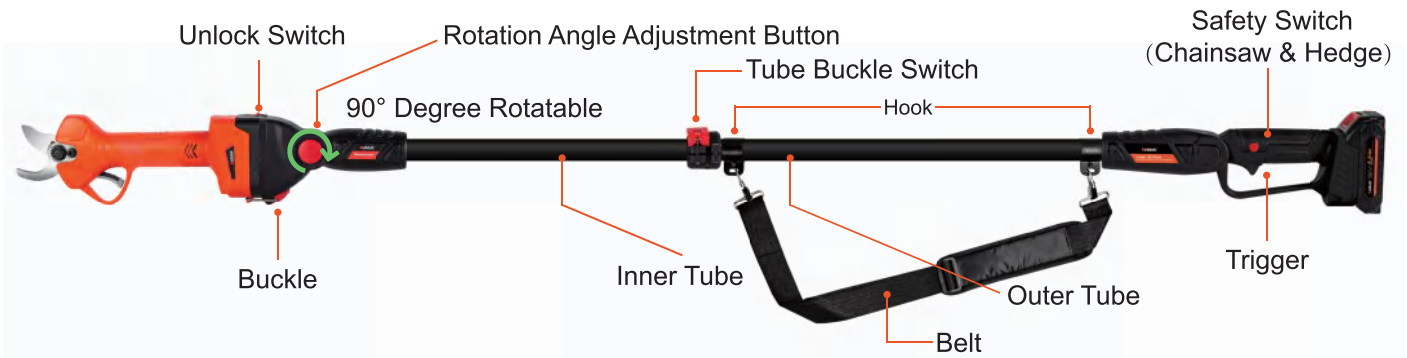

## I. Installation steps for the use of extension pole.



1. After the pruning shears socket is aligned with the extension pole socket, lock it with a "click" sound;
2. The ring buckle is snapped into the card slot, and the red buckle is pulled down to lock it.
3. The lithium battery card slot is aligned with the extension pole socket. After pushing in, you hear a "click" to lock it.
4. Hang the buckle of the belt on the hook, and adjust the hook to a suitable position and lock the hook.
5. Turn on the power switch on the hook, and adjust the hook to a suitable position and lock the hook.

## II. Use of the inner tube of the extension pole:



1. Open the red tube buckle and adjust the telescopic length of the inner tube, Adjustable from 122cm (48 in) to 182cm(71.65 in).
2. Lock the tube buckle to use the extension pole.



### WARNING

1. Do not use or expose the electric pruning shears in the rain.
2. When operating the electric pruning shears, do not touch the cutting area with your hands to avoid injury.
3. When operating the extension pole, keep alert, away from children and bystanders, and do not operate it at people.
4. When installing or removing pruning shears, be sure to cut off the power first.
5. Make sure the pruning shears are in place and the buckle is locked tightly before turning on the power.
6. The battery socket of the power tool must be matched with the battery connection, do not modify the socket and jack in any way.

**Any problems please contact us first:**  
[support@Kebtek.com](mailto:support@Kebtek.com)